



# Building a trainer cable for the OrangeRX T-Six

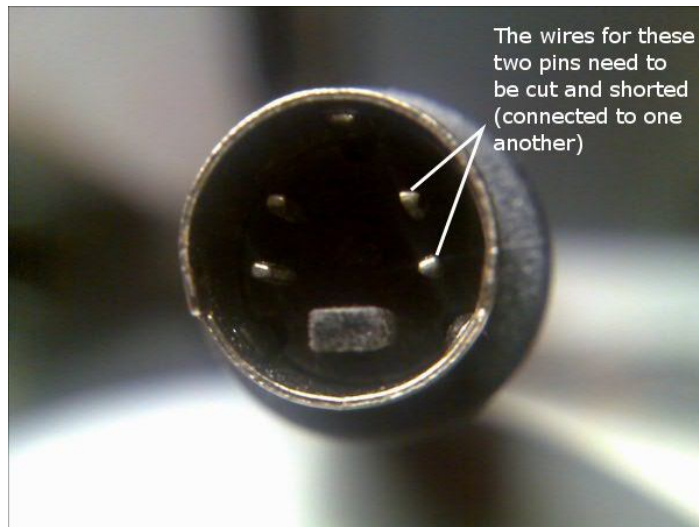

A standard S-Video cable does not work without modifications. Two of the pins need to be shorted before the cable will work.

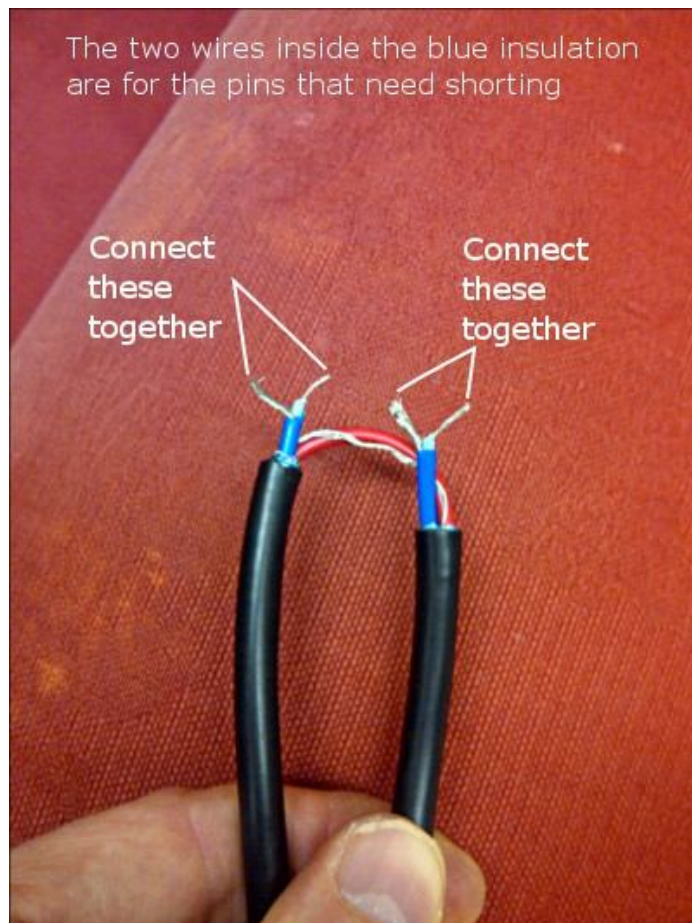

You will have to cut away a short section of the outer insulation to expose the inner wires. There should be 3 wires visible when you open it up; a bare ground and two colored wires. The colored wires actually have two pin wires inside.

Use a multi-meter to figure out which wires connect the appropriate pins.

Connect the pin wires together. You can solder them if you like.

The two pin wires have been connected together.



Throw on some heat shrink and wrap it all back up and you are good to go.